




recoSTAR technology is designed for **high automation** and **user-friendliness**. The touch screen enables a simple start-stop procedure, RFID-chip user levels and screenshots (USB port). This ensures **highest efficiency** and consequently **fast ROI**. Features are either standard or can be added according to customer's requirements




Automatic food-grade monitoring
Food-grade relevant process parameters are monitored; in case of deviations the material is automatically rejected. Consequently, only food-safe material is produced.

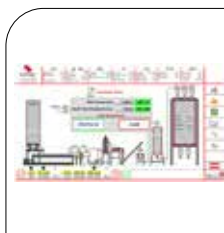

Inline viscosimeter
The continuously measured IV of the PET melt during extrusion helps to control quality and indicates any required change of settings.




Online color measurement
Colour deviations from a set standard are detected and serve as an inline quality control of the input material. Deviations can be offset by adding additive (either liquid or masterbatch).

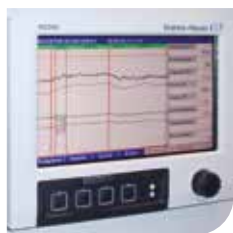

Online writer and archiving
The online writer collects all relevant production data for secure traceability. Up to 50 parameters can be stored in short sequences in an internal memory and thus are saved in the event of a power cut.

recoSTAR PET art

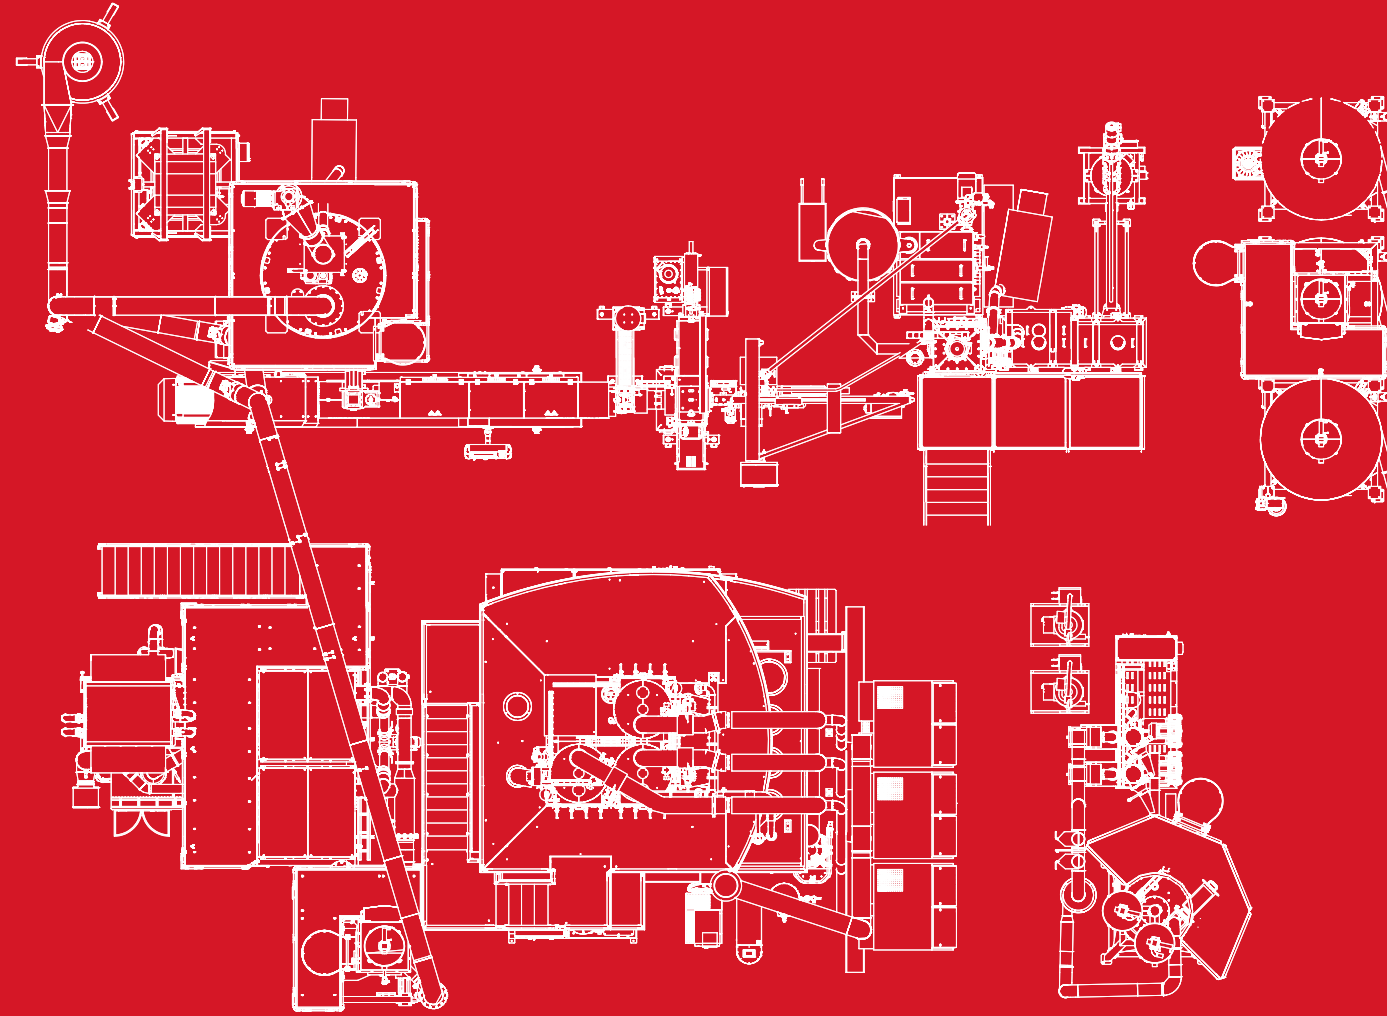

We reserve the right to technical modifications. DPR-2494-09V

recoSTAR PET art					
Type	125	145	165	215	330
Dimensions					
Height [mm]	13300	13300	14000	16200	14000
Height [inches]	524	524	551	638	551
Footprint [mm]	22000 x 20500	23000 x 20500	23000 x 20500	25500 x 20500	35000 x 32000
Footprint [inches]	866 x 807	906 x 807	906 x 807	1004 x 807	1378 x 1260
Output					
Output [kg/h]	1000 - 1200	1300 - 1500	1900 - 2100	3000 - 3200	3800 - 4200
Output [lbs/h]	2204 - 2646	2866 - 3306	4189 - 4630	6614 - 7055	8377 - 9259
Plant energy consumption [kWh/kg]					
	0.34-0.39				
Extruder					
Screw Diameter (L/D) [mm]	125 (24)	145 (24)	165 (24)	215 (24)	2x165 (24)
Screw Diameter (L/D) [inch]	4.9 (24)	5.7 (24)	6.5 (24)	8.5 (24)	2x6.5 (24)
Downstream equipment					
Underwater pelletiser	x	x	x	x	x
Automatic strand pelletiser	Alternativ	Alternativ	Alternativ	Alternativ	Alternativ
Solid State Polycondensation					
IV increase [dl/g/h]	0.01-0.02				


Starlinger recycling technology
Furtherstrasse 47a
2564 Weissenbach, Austria
T: + 43 2674 800 3101
F: + 43 2674 86328
E: recycling@starlinger.com
recycling.starlinger.com

Starlinger Head Office
Sonnenuhrgasse 4
1060 Vienna, Austria
T: + 43 1 59955-0, F: -180

Starlinger & Co Gesellschaft m.b.H.
A member of Starlinger Group

All data depending on design!

recoSTAR® is a registered trademark of Starlinger & Co Gesellschaft m.b.H.

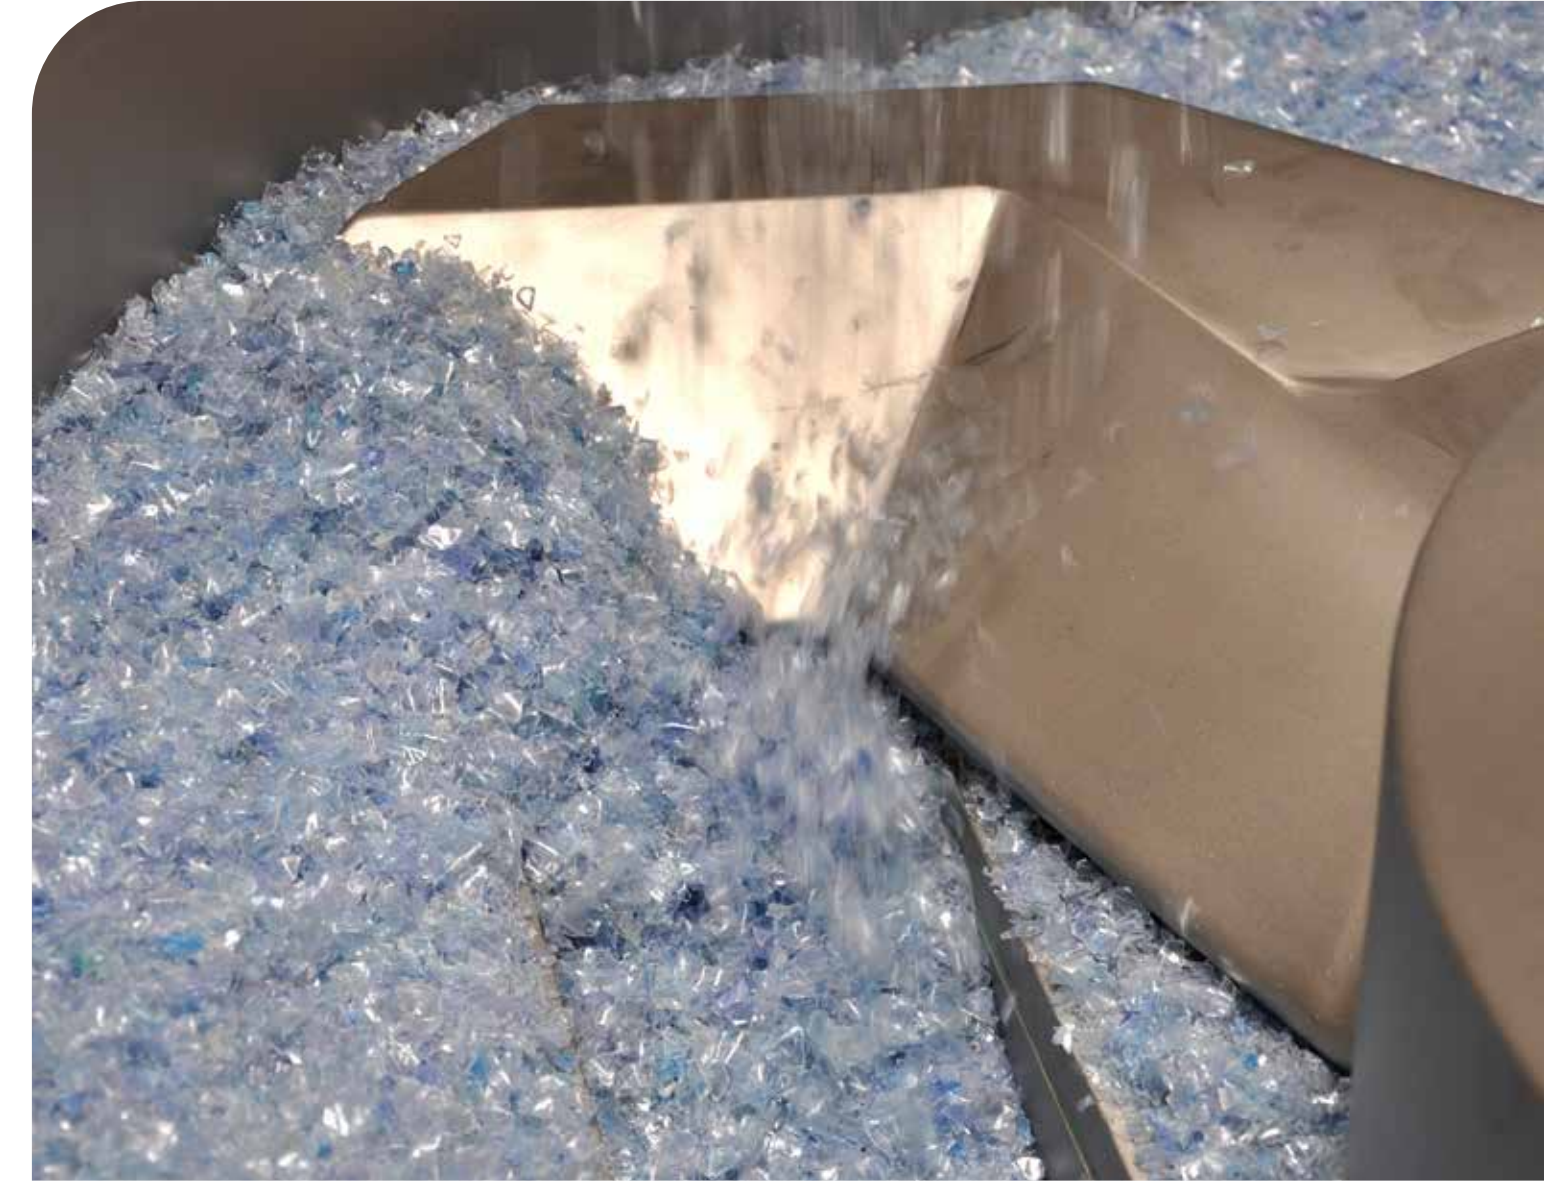

RECYCLING LINE recoSTAR PET art

for post-consumer PET bottle flakes, FIFO pre-drying, single screw extrusion, FIFO Solid State Polycondensation, high-end bottle-to-bottle recycling, automatic food-grade monitoring




Starlinger





High-end bottle-to-bottle recycling line for the recycling of post-consumer bottle flakes after the washing process. The end product is melt-filtered, uniform granulate of highest purity and lowest VOCs.

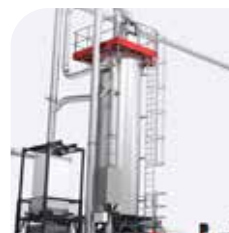

FIFO pre-drying of the PET bottle flakes ensures optimal preparation for subsequent extrusion. Single-stage drying with hot, desiccant air according to the First-In First-Out principle.



Single-screw extrusion with short melt phase. The melt pump increases the overall output, stabilizes the melt pressure and ensures a consistent process and melt quality.



Backflushing melt filters remove solid contaminants. They are designed for straight melt flow and work with an automatic self-cleaning procedure triggered by melt pressure. Cartridge filters are an option for increased filtration surface in a compact housing.




The underwater pelletiser produces spherical pellets. The downstream inline crystallizer takes advantage of the embedded melt energy and crystallizes the pellets without the need of external heat. Pellet size and bulk density are adjustable.



Solid State Polycondensation enables consistent and adjustable IV increase with the FIFO principle. Outstanding decontamination for bottle-to-bottle application. Acetaldehyde and other VOCs are reduced to the levels of virgin resin.



Energy efficiency is ensured by various design features. Energy recovery is available for the pre-heater of the SSP and the final pellets. Alternative energy sources such as natural gas or steam can be used as a cost-friendly alternative for heating.

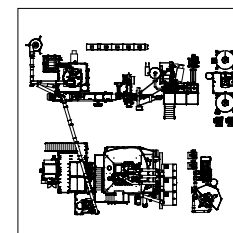

Compact design: The set-up of the recycling line is flexible, most popular options are L, U, or line shape. Each layout option utilizes minimal foot print while maintaining access to relevant operation and maintenance points.



Easy Maintenance High up-time and machine availability are key for low production costs. Smart solutions such as dry vacuum pumps or open loop desiccant air flow reduce maintenance requirements to a minimum.

Advantages


- Outstanding food-contact decontamination
- Adjustable IV increase
- FIFO ensures uniform treatment
- Low energy consumption
- Small footprint
- Convenient operation & maintenance




Starlinger recycling technology allows **utmost flexibility** for the customer and adjustment to the ever-changing requirements in the market or applications through **modular design**.

recoSTAR PET art	Food contact	FDA/EFSA	Decontamination/ VOC	Brand owner approved	Low AA level	IV increase
	✓	✓	✓✓✓	pending	✓✓	✓✓✓ with full output

PET flakes are heated and dried in a single-stage process with hot desiccant air. The special design of the dryer outlets results in center flow prevention, consistent residence time and FIFO processing, ensuring ideal preparation for the extrusion process. A choice of filtration and pelletising systems are available. The downstream inline vacuum SSP reactor uses the energy of the previous step. Special FIFO design ensures consistent reaction parameters, adjustable IV increase as well as highly effective decontamination (ultra-low VOC, AA < 1 ppm) for food contact applications.

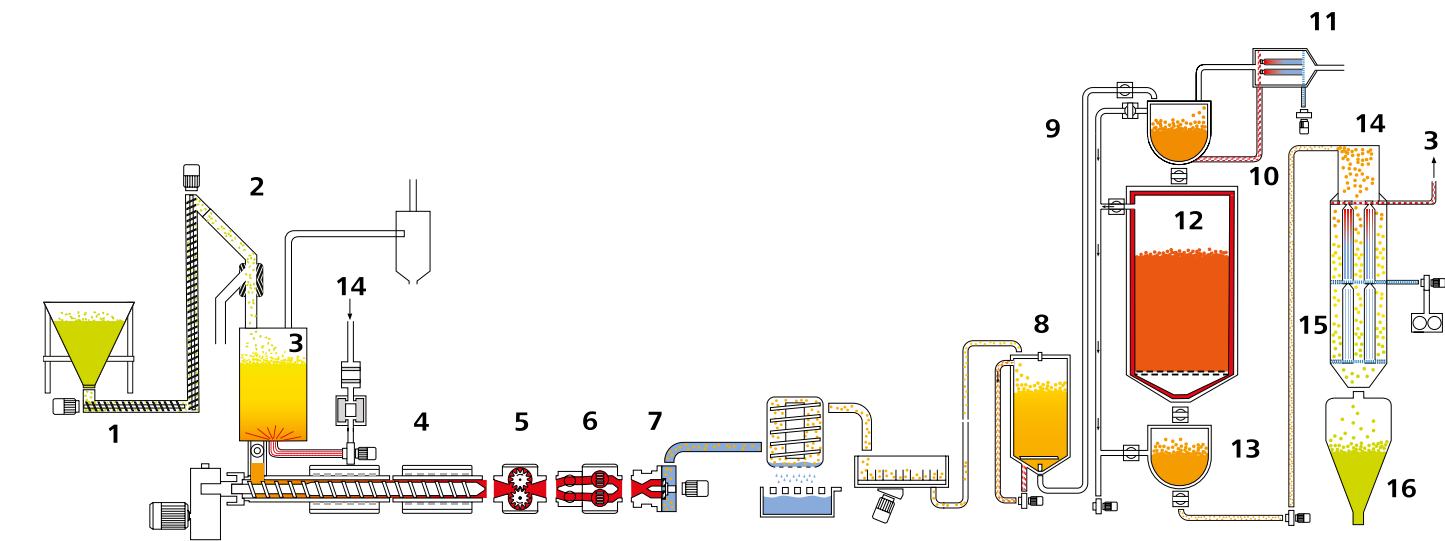

- | | | | |
|-------------------------|--|-----------------------------------|-------------------------|
| 1. Feeding screw | 5. Melt pump | 9. Separate vacuum feeding system | 13. Discharge unit |
| 2. Metal separator | 6. Melt filter with backflush | 10. SSP preheater | 14. Energy recovery kit |
| 3. Combined drying unit | 7. Underwater pelletiser with inline crystallisation | 11. Heat exchanger for preheater | 15. Pellet water cooler |
| 4. Extruder | 8. Post-crystallisation unit | 12. SSP reactor | 16. Storage silo |

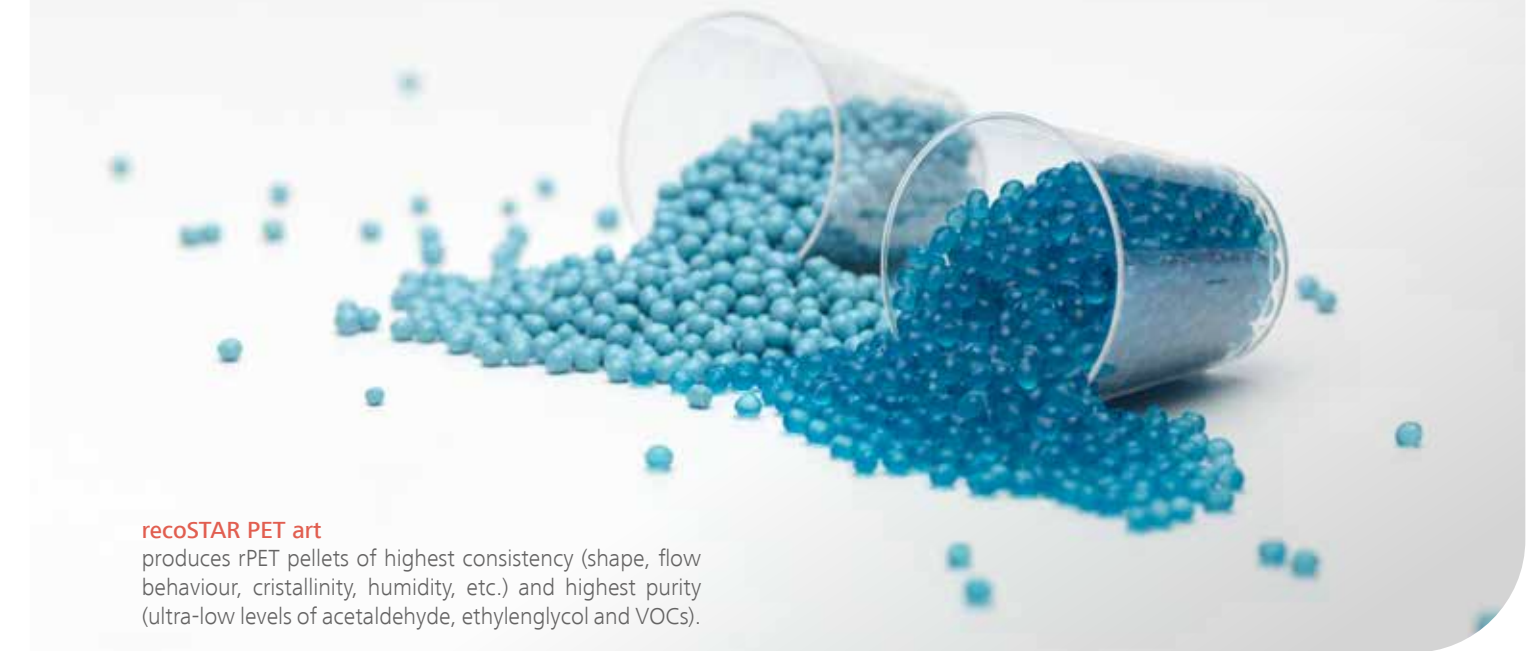

recoSTAR PET art produces rPET pellets of highest consistency (shape, flow behaviour, crystallinity, humidity, etc.) and highest purity (ultra-low levels of acetaldehyde, ethylenglycol and VOCs).